

TV SPORTS PACK

SPK-KS44

取扱説明書

お買い上げいただきありがとうございます。

お使いになる前に、この取扱説明書をお読みください。

お読みになったあとは、後日お役に立つこともありますので、必ず保存してください。

Operating Instructions

Before operating the unit, please read this manual thoroughly and retain it for future reference.

SPK-KS44 は、ソニーのLCD カラーテレビFDL-KS44 をプールサイドや海辺で使用するためのTV スポーツバックです。

水中ではご使用になれません。


本機はJIS 防水規格の防まつ形です。

©1991 by Sony Corporation

取り扱い上のご注意


- ・海辺や海上でのスポーツバックの開閉はできるだけ避けてください。LCD カラーテレビの取り付けは、湿気の少ない、潮風にあたらない場所で行なってください。
- ・高温・多湿な場所でスポーツバックの開閉をした後、寒いところへもって行くとスポーツバック内部で結露現象が起こり、画面が曇ったり、LCD カラーテレビの故障の原因となります。
- ・スポーツバックの防滴性能は、防水パッキン、およびその接触面を保たれています。これらの部分に物をぶつけたり、異物をはさみこんだりして傷をつけないよう、十分注意してください。
- ・炎天下に長時間放置しないでください。内部の温度が上昇し、LCD カラーテレビの故障の原因となります。
- ・直射日光のあたる場所に置く場合は、タオルなどを上からかけておいてください。
- ・スピーカー部に強い水しぶきをあてないでください。
- ・スピーカー部を針などでささないでください。
- ・寒冷地でお使いになる時は、バッグなどに入れて極端に冷えないようにし、使用するときのみバッグから出して使用するようにしてください。

各部の名称

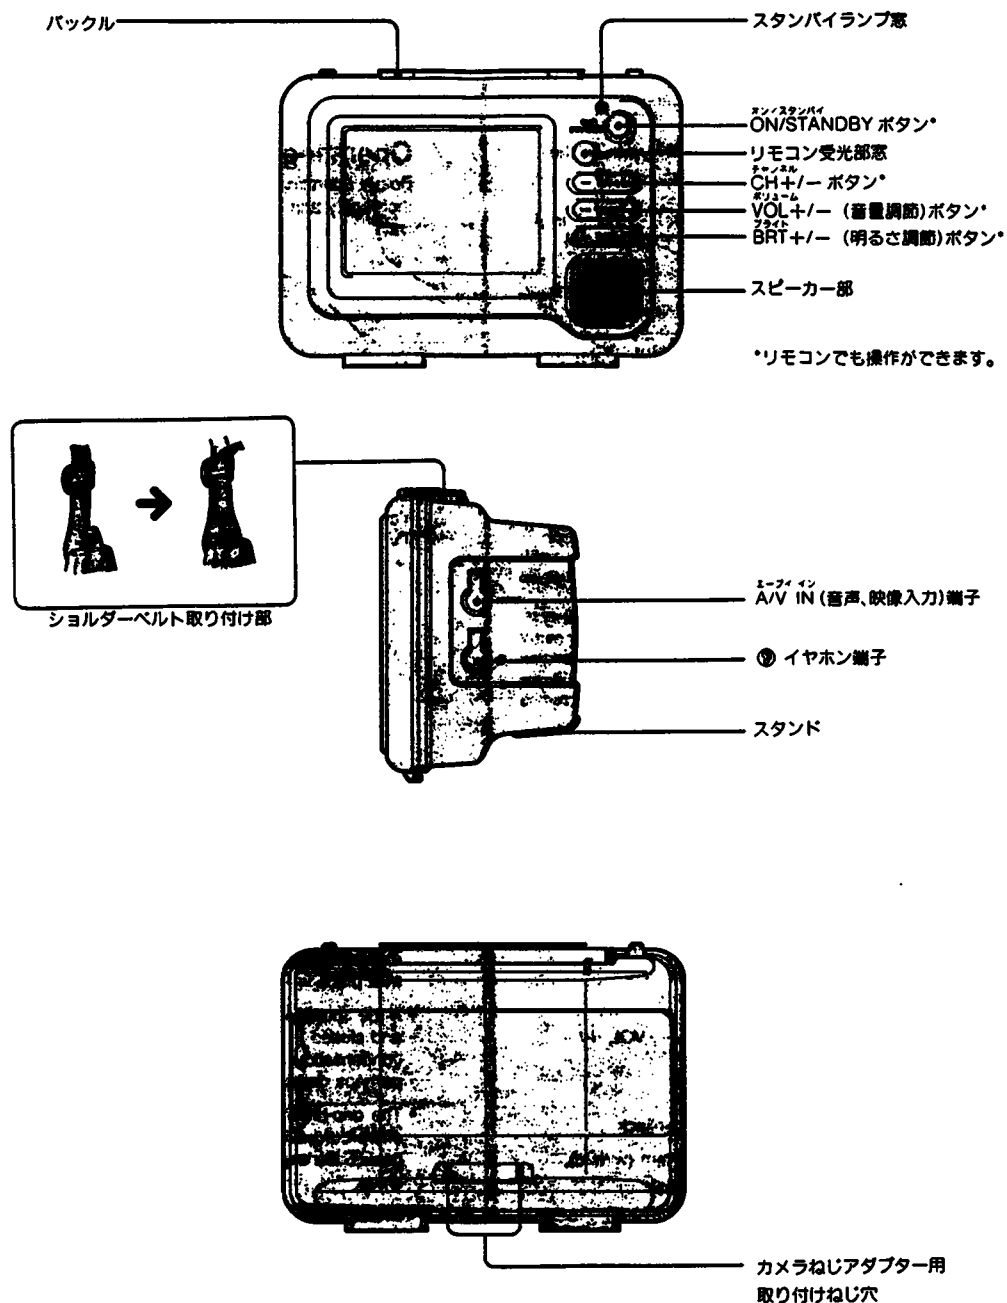

- ・ご使用の際は、防水パッキンおよび接触面の砂やゴミなどをきれいに取
り除いてください。砂やゴミが付着したままふたを開めると、傷がつい
て浸水の原因になります。
- ・防水パッキンが傷ついたりヒビ割れした場合は、防水パッキンの交換が
必要です。ソニーサービス窓口にご相談ください。


取り扱いの不注意により、万一水漏れ事故を起こした場合、内部機材
(LCD カラーテレビ、バッテリーなど) の損傷等については責任を負いか
ねますので十分ご注意ください。

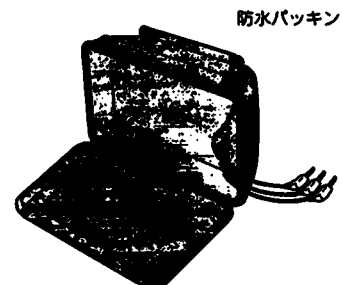

TVスポーツバックを使うには


1 スポーツバックを開ける。

バックルを上にあげる。

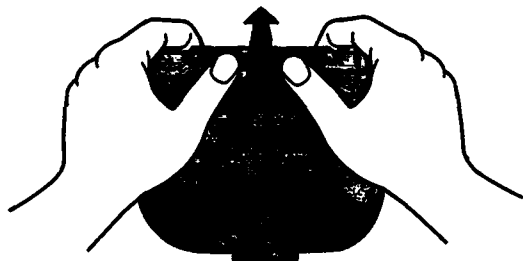

2 LCD カラーテレビを準備する。

1 バッテリーを取り付ける。

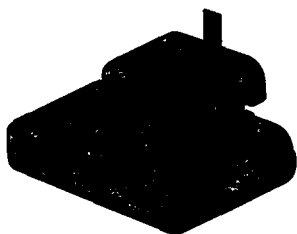


2 テレビのPOWER (電源)スイッチをONにする。



3 DIMMER スイッチ(側面)をHIGHかLOWにする。

スポーツバック使用時にはテレビのオートディマー機能を働かせることはできません。

設定のめやす
周囲が明るいとき: HIGH
周囲が暗いとき: LOW

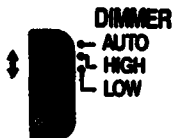


4 側面、裏面の操作ボタンをお好みのモードに設定する。

スポーツバック取り付け後は、側面や裏面の操作ボタンを使用することができないので、あらかじめ設定および調整しておいてください。

切り換えスイッチ	位置
TUNING (側面)	MEMORY あるいは SEEK
プリセット (裏面)	テレビ
色合い調節つまみ (裏面)	お好きな色合いに調節
色の濃さ調節つまみ (裏面)	お好きな濃さに調節

3 スポーツバックに取り付ける。

1 コードを接続する。

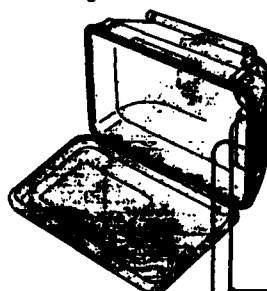


テレビを見る場合
アンテナコードをテレビの
EXT ANT 端子に接続する。

モニターとして使う場合
A/V コードを A/V IN 端子に
接続する。

このとき
A/V コードを接続すると、テレビ番組を受信することはできません。


イヤホンを使う場合
イヤホンコードを ② (イヤホン) 端子に接続する。

イヤホンコードを接続するとスピーカーから音は出ません。

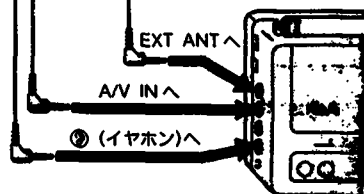


スポーツバックにテレビを入れる前に、スポーツバック内部に水滴がついていないかよく点検してください。
水滴がついている場合は、乾いたやわらかい布で充分にふきとってください。また、雨や水しぶきのかかる場所でテレビの取り付けはしないでください。

2 テレビをスポーツバックに入れる。

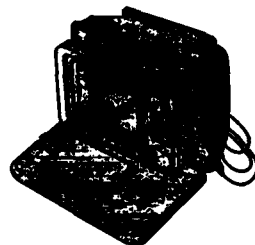

本体を開じる前に、防水パッキンおよびその接触面にゴミや傷がないかよく点検してください。また、接続コードをはさんでいないか確認してください。

3 スポーツバックを閉じる。

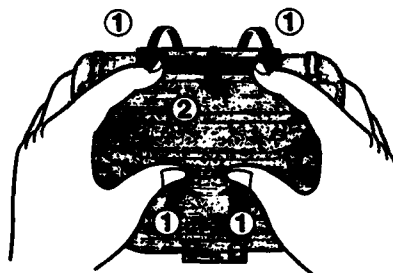

① ボディをしっかり押さえる。


② バックルをカチッと止まるまで閉める。

テレビをみるには


- 1** ON/STANDBY ボタンあるいはカードコマンダーの POWER ボタンを押す。



- 2** チャンネルを選ぶ。

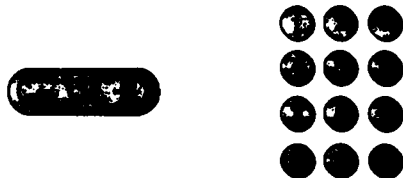

- 3** スタンドでスポーツバックの角度を調節する。

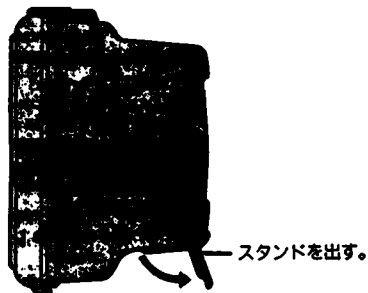

- 4** ロッドアンテナの方向、角度、長さを調節する。

- 5** 音量を調節する。




- 6** 明るさを調節する。BRT +/- (明るさ調節) ボタンで、画面を見やすい明るさに調節します。




* 長時間お使いにならないときは、テレビ本体のPOWER(電源)スイッチをOFFにしてください。

スポーツバックを開けるときには、スポーツバックと体についた水分を十分にふき取ってから開け、水が内部のテレビにかからないようご注意ください。

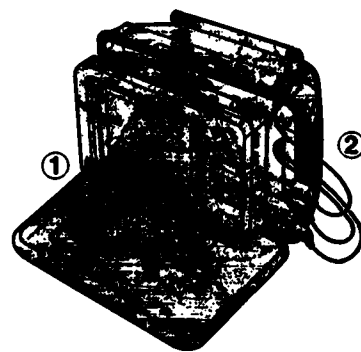


- ① テレビを引き出す。
② 接続したコードをはずす。

専用フードをつけるには

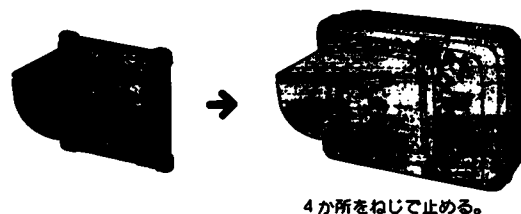

4 か所をねじで止める。

三脚などにつけるには (カメラねじアダプターの取り付けかた)

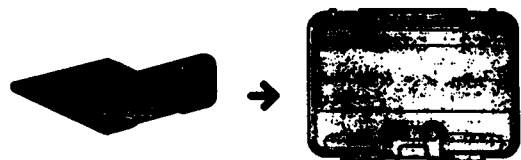

先端をスポーツバックの溝に差し込み、2 か所をねじで止める。

お手入れのしかた

海での使用後は、必ずぬれた柔らかい布で塩分を落としてください。塩分がついたままにしておくと、金属部分がさびることがあります。スポーツバック内部は、乾いた柔らかい布でふいてください。
シンナー、ベンジン、アルコールなどは表面の仕上げをいためますので、使わないでください。

保管するときは

- ・防水パッキンの劣化を防ぐため、バックルは締めないでください。お買い求めいただいたときについていたスペーサーをご使用ください。
- ・防水パッキンにホコリが付かないようにしてください。
- ・高温、寒冷、多湿な場所や、ナフタリン、樟脳などのある場所には置かないでください。

主な仕様

種類	TV スポーツバック
使用可能機種	LCD カラーテレビ FDL-KS44
材質	プラスチック
防滴仕様	JIS 規格 防まつ形準拠
操作可能な機能	ON/STANDBY、CH +/- VOL +/-、BRT +/-
入力端子	A/V IN 端子：ミニジャック イヤホン端子：ミニジャック (ステレオヘッドホンにも対応)
最大外形寸法	176×133.4×86.6mm (幅/高さ/奥行き)
重量	約270g
付属品	ショルダーベルト (1) 専用フード (1) カメラねじアダプター (1)

本機の仕様および外観は、改良のため予告なく変更することがありますが、ご了承ください。

ソニー株式会社 〒141 東京都品川区北品川6-7-35

お問い合わせはお客様ご相談センターへ

●東京(03)3448-3311 ●大阪(06)251-5111 ●名古屋(052)232-2611

Printed in Japan

保証書とアフターサービス

- ・この製品には保証書が添付されていますので、お買い上げの際お買い上げ店でお受け取りください。
- ・所定事項の記入および記載内容をお確かめのうえ、大切に保存してください。
- ・保証期間は、お買い上げ日より1年間です。

調子が悪いときはまずチェックを

この説明書をもう一度ご覧になってお調べください。

それでも具合の悪いときはサービスへ

お買い上げ店、または添付の「サービス窓口・ご相談窓口のご案内」にあるお近くのソニーサービス窓口にご相談ください。

保証期間中の修理は

保証書の記載内容に基づいて修理させていただきます。詳しくは保証書をご覧ください。

保証期間経過後の修理は

修理によって機能が維持できる場合は、ご要望により有料修理させていただきます。

当社ではスポーツバックの補修用性能部品（製品の機能を維持するために必要な部品）を、製造打ち切り後最低5年間保有しています。この部品保有期間を修理可能の期間とさせていただきます。保有期間が経過した後も、故障箇所によっては修理可能な場合がありますので、お買い上げ店か、サービス窓口にご相談ください。

ご相談になるときは次のことをお知らせください。

- 型名：SPK-KS44
- 故障の状態：できるだけ詳しく
- 購入年月日：

SONY.

TV SPORTS PACK

SPK-KS44

Operating Instructions



Before operating the unit, please read this manual thoroughly and retain it for future reference.

You can enjoy watching TV programs on the LCD color TV (FDL-K400) with this sports pack (SPK-KS44) at the beach. You cannot use this sports pack in the water.



Precautions

- Avoid opening the sports pack when you are at the beach. Operations such as attaching the battery pack should be done in a place with low humidity and no sea breeze.
- If the sports pack is taken to a cold place after being opened and closed in a hot place with high humidity, moisture condensation may occur, causing the glass to fog up and perhaps damaging the equipment.
- The drip-proof integrity of the sports pack is maintained by the drip-proof gasket or the surface of the body in contact with the gasket. Be especially careful not to damage or deform these areas.
- Check there is no foreign material such as dust or sand on the drip-proof gasket before using the sports pack.
- Do not leave the sports pack in direct sunlight for a long period of time. Otherwise the inside temperature of the pack may rise and the recorder in the pack may be damaged.
- Use the pack for no longer than an hour at an ambient temperature of 40°C (104°F). You can use the pack normally at the temperature lower than 35°C (95°F).
- If you cannot avoid leaving the sports pack in the sun, be sure to cover it with a towel or similar.

Parts Identification

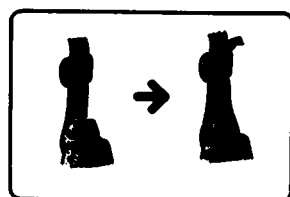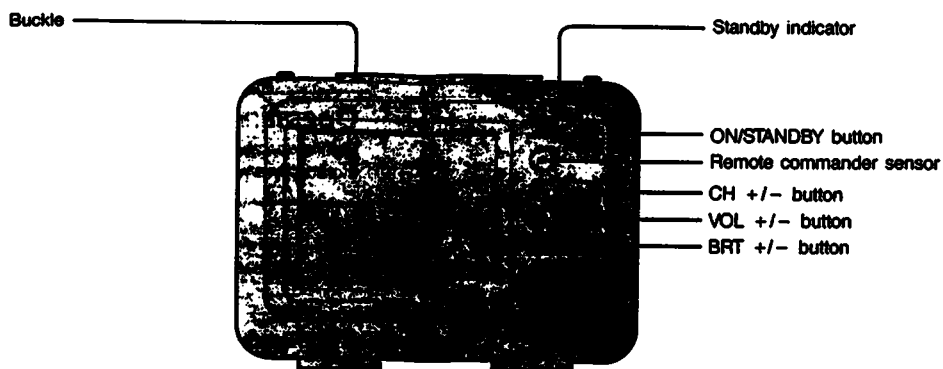


for shoulder strap

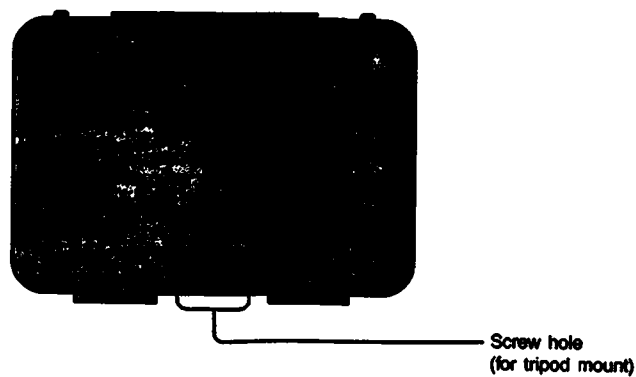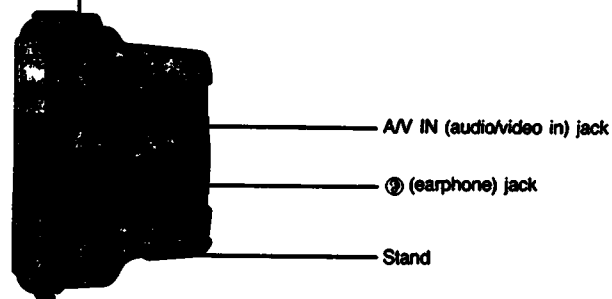

Uses


1 Opening the sports pack.

Lift up the buckle.

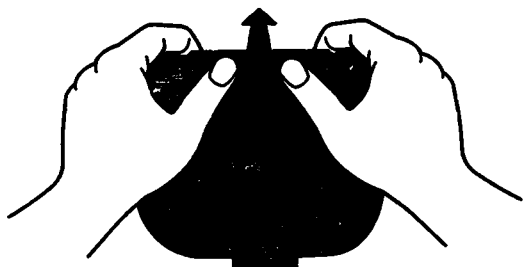

2 Before installing.

1 Attach the battery pack.

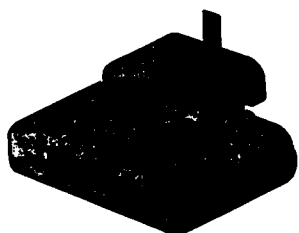

2 Set the POWER switch of the TV to ON.



3 Set the DIMMER switch to HIGH or LOW. This SPORTS PACK does not have an AUTO DIMMER sensor.




4 Set the buttons/switches on rear and side to the position below.

Set ...	to ...
TUNING	MEMORY or SEEK
PRESET	TV
Hue	adjust to set the skin tones as you like.
Color	set the color as you like.


3 Installing the TV.

1 Connecting the cables.

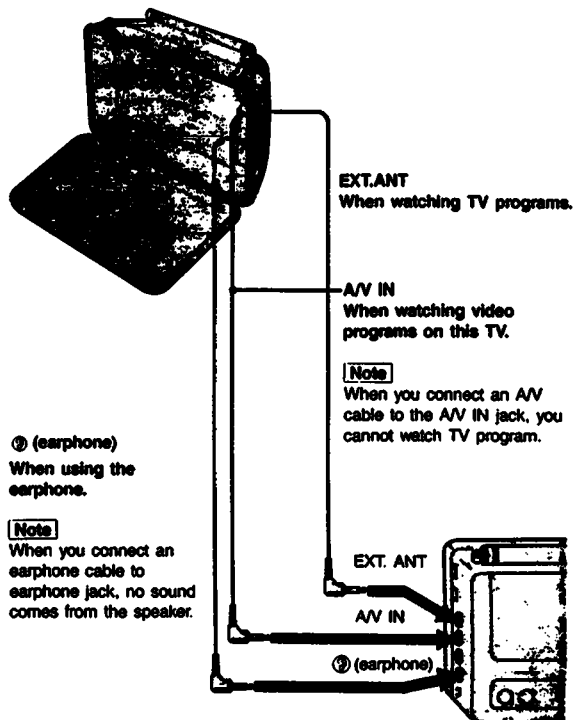


Before inserting the TV, check that there is no water in the sports pack. Clean the inside with a soft cloth. Install the TV in the place with low humidity and no sea breeze.

2 In the direction of the arrow, insert the TV into the rear part of the sports pack.

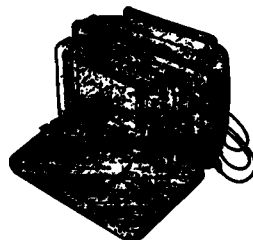

Before closing the sports pack body, check that there is no dust on or cracks in the waterproof gasket or on the surface. Make sure that there is no sand or dust on the gasket, in the groove or on the body surface where the gasket fastens the sports pack.

3 Closing the sports pack.

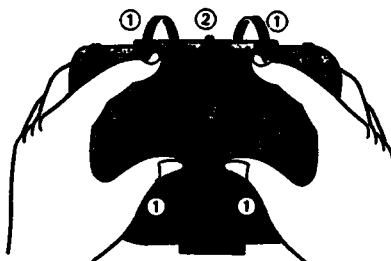


- ① Securing the pack body.
- ② Close the buckle until it clicks.

Watching the TV


- 1 Press the ON/STANDBY button or POWER button on the card commander.



- 2 Select the channel.

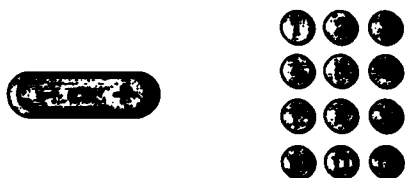

- 3 Adjust the angle of the TV using the stand.

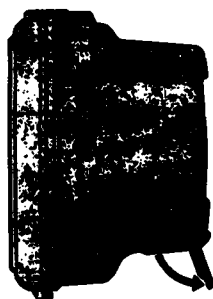

- 4 Adjust the angle of TV antenna.




- 5 Adjust the volume.



If you do not watch the TV for a longtime, set the POWER switch of the TV to OFF.


Before removing the TV from the sports pack, wipe any water from the sports pack and your hands.

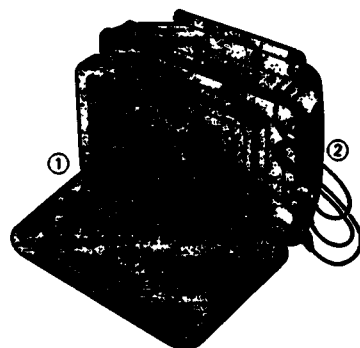

- 1 Pull out the TV gently.
- 2 Unplug the connected cables.

Watching the TV in Bright Light


The shading hood (supplied) reduces glare and reflected light allowing you to watch the TV under bright sunlight.

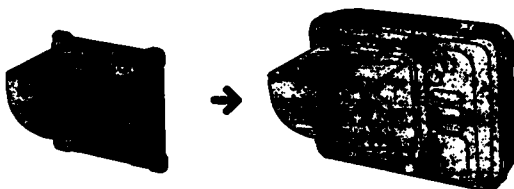

Screw the tripod mount on the sports pack.

Set up the Sports Pack with a Tripod

Attach the tripod mount (supplied) to the sports pack, then attach a tripod.

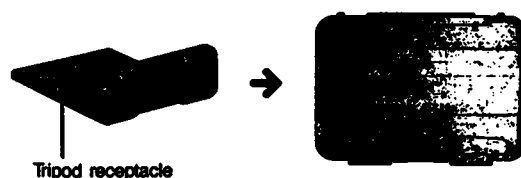

Screw the hood on the sports pack.

Maintenance

After using

After using the sports pack at the beach, wipe it with a soft wet cloth. If the water remains on the sports pack, the metal parts may rust. Clean the inside of the pack with a soft cloth. Do not use any type of solvent such as alcohol or benzene for cleaning, as this might damage the finish.

When storing the sports pack

Close the pack without fastening the buckle to prevent wear on the drip-proof gasket.

Avoid storing the sports pack in a hot, very cold or humid place, in a place subject to direct sunlight or excessive dust, or together with naphthalene or camphor.

On the Drip-proof gasket

- Scratches or cracks on the drip-proof gasket may cause water leakage. If there are any, contact your nearest SONY dealer to replace the gasket with a new one.
- Remove foreign materials such as dust and sand completely from the gasket, the grooves and the surfaces of the body in contact with the gasket. If the lid is closed with such materials present, these areas may be damaged and water may leak in.

Sony does not accept liability for damages to the LCD Color TV, battery etc. in the sports pack if water leakage occurs as a result of incorrect operation.

Specifications

Compatible equipment	Sony LCD Color TV FDL-K400
Material	Plastic (ABS and PC), glass
Splash-proof	Drip-proof gasket, buckle
Controllable function	ON/STANDBY on/off, CH +/–, VOL +/–, BRT +/–,
Input jack	AV IN jack: mini jack, (earphone) jack: mono minijack
Dimensions	Approx. 176 × 133.4 × 86.6 mm (w/h/d), (7 × 5 ³ / ₈ × 3 ¹ / ₂ inches)
Weight	Approx. 270 g
Accessories supplied	Shoulder strap (1), Shading hood (1), Tripod mount (1)